

# Translations:Descal your Nespresso Pixie machine/30/en

---

Simultaneously press both buttons for 3 seconds to exit the descaling mode.