

Translations:Encochage de tôle/5/en

- Adjust the punch angle using the notching die
- Click the ON key to start the machine