

# Translations:Descale your Nespresso Pixie machine/13/en

---

Once both buttons no longer blink and remain on, press them simultaneously for 3 seconds.