Translations: Descale your Nespresso Pixie machine/27/en

Press the 'big cup' button to empty the tank of its contents.