




Cleaning the agitator of a washing machine

Cleaning the agitator of a washing machine

 Difficulty **Very easy**

 Duration **12 minute(s)**

 Area **Safety**

 Business **Manufacturer**

Contents

Video overview

Items

Step 1 - Switch off the power supply

Step 2 - Remove the agitator


Step 3 - Nettoyer l'agitateur

Step 4 - Repositionnez l'agitateur

Step 5 - Lancez une machine

Comments

Items

 Washing machine

Step 1 - Switch off the power supply

Unplug the washing machine from the wall outlet or turn off the power in your service panel.




Step 2 - Remove the agitator

Open the lid of the washing machine and remove all remaining clothes inside.

Soulever le capuchon de l'agitateur avec un tournevis à tête plate.

Mettez une paire de gants puis glissez la main à travers l'agitateur. Saisissez-le fermement puis remontez-le vers le haut. Mettre de côté.

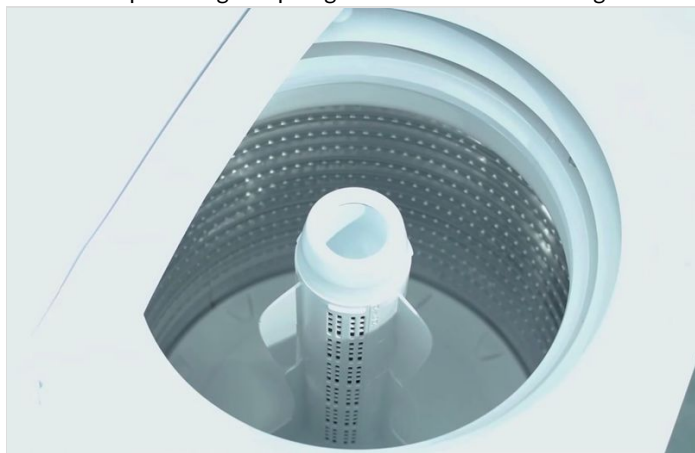

Step 3 - Nettoyer l'agitateur

Nettoyez l'agitateur au dessus d'un évier avec un nettoyant standard et un chiffon.

Une brosse en nylon peut vous aider à supprimer toute moisissure tenaces.



Step 4 - Repositionnez l'agitateur

Repositionnez l'agitateur sur l'arbre d'entraînement.
Fixez-le avec le boulon que vous avez initialement retiré.
Remplacez le capuchon.



Step 5 - Lancez une machine

Rétablir l'alimentation à la machine à laver pour effectuer la réparation.

Lancer une charge courte sur le réglage de température plus élevé. Verser 1/4 tasse d'eau de Javel dans la machine à rincer et aider à désinfecter après le nettoyage.

